

OWNER'S MANUAL
Model QCT46
Product No. 960 72 00-13
Mfg. ID No. 96072001300
46 Inch Mower
Grass Catcher

- **Assembly**
- **Operation**
- **Customer Responsibilities**
- **Repair Parts**

Poulan PRO

SAFETY RULES

Safe Operation Practices for Ride-On Mowers

IMPORTANT: THIS CUTTING MACHINE IS CAPABLE OF AMPUTATING HANDS AND FEET AND THROWING OBJECTS. FAILURE TO OBSERVE THE FOLLOWING SAFETY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.



WARNING: In order to prevent accidental starting when setting up, transporting, adjusting or making repairs, always disconnect spark plug wire and place wire where it cannot contact spark plug.



WARNING: Do not coast down a hill in neutral, you may lose control of the tractor.



WARNING: Tow only the attachments that are recommended by and comply with specifications of the manufacturer of your tractor. Use common sense when towing. Operate only at the lowest possible speed when on a slope. Too heavy of a load, while on a slope, is dangerous. Tires can lose traction with the ground and cause you to lose control of your tractor.

I. GENERAL OPERATION

- Read, understand, and follow all instructions on the machine and in the manual before starting.
- Do not put hands or feet near rotating parts or under the machine. Keep clear of the discharge opening at all times.
- Only allow responsible adults, who are familiar with the instructions, to operate the machine.
- Clear the area of objects such as rocks, toys, wire, etc., which could be picked up and thrown by the blades.
- Be sure the area is clear of bystanders before operating. Stop machine if anyone enters the area.
- Never carry passengers.
- Do not mow in reverse unless absolutely necessary. Always look down and behind before and while backing.
- Never direct discharged material toward anyone. Avoid discharging material against a wall or obstruction. Material may ricochet back toward the operator. Stop the blades when crossing gravel surfaces.
- Do not operate machine without the entire grass catcher, discharge guard, or other safety devices in place and working.
- Slow down before turning.
- Never leave a running machine unattended. Always turn off blades, set parking brake, stop engine, and remove keys before dismounting.
- Disengage blades when not mowing. Shut off engine and wait for all parts to come to a complete stop before cleaning the machine, removing the grass catcher, or unclogging the discharge guard.
- Operate machine only in daylight or good artificial light.
- Do not operate the machine while under the influence of alcohol or drugs.
- Watch for traffic when operating near or crossing roadways.
- Use extra care when loading or unloading the machine into a trailer or truck.
- Always wear eye protection when operating machine.

- Data indicates that operators, age 60 years and above, are involved in a large percentage of riding mower-related injuries. These operators should evaluate their ability to operate the riding mower safely enough to protect themselves and others from serious injury.
- Follow the manufacturer's recommendation for wheel weights or counterweights.
- Keep machine free of grass, leaves or other debris build-up which can touch hot exhaust/engine parts and burn. Do not allow the mower deck to plow leaves or other debris which can cause build-up to occur. Clean any oil or fuel spillage before operating or storing the machine. Allow machine to cool before storage.

II. SLOPE OPERATION

Slopes are a major factor related to loss of control and tip-over accidents, which can result in severe injury or death. Operation on all slopes requires extra caution. If you cannot back up the slope or if you feel uneasy on it, do not mow it.

- Mow up and down slopes, not across.
- Watch for holes, ruts, bumps, rocks, or other hidden objects. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
- Choose a low ground speed so that you will not have to stop or shift while on the slope.
- Do not mow on wet grass. Tires may lose traction. Always keep the machine in gear when going down slopes. Do not shift to neutral and coast downhill.
- Avoid starting, stopping, or turning on a slope. If the tires lose traction, disengage the blades and proceed slowly straight down the slope.
- Keep all movement on the slopes slow and gradual. Do not make sudden changes in speed or direction, which could cause the machine to roll over.
- Use extra care while operating machine with grass catchers or other attachments; they can affect the stability of the machine. Do not use on steep slopes.
- Do not try to stabilize the machine by putting your foot on the ground.
- Do not mow near drop-offs, ditches, or embankments. The machine could suddenly roll over if a wheel is over the edge or if the edge caves in.

III. CHILDREN

Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the machine and the mowing activity. *Never* assume that children will remain where you last saw them.

- Keep children out of the mowing area and in the watchful care of a responsible adult other than the operator.
- Be alert and turn machine off if a child enters the area.
- Before and while backing, look behind and down for small children.
- Never carry children, even with the blades shut off. They may fall off and be seriously injured or interfere with safe machine operation. Children who have been given rides in the past may suddenly appear in the mowing area for another ride and be run over or backed over by the machine.
- Never allow children to operate the machine.
- Use extra care when approaching blind corners, shrubs, trees, or other objects that may block your view of a child.



SAFETY RULES

Safe Operation Practices for Ride-On Mowers



IV. TOWING

- Tow only with a machine that has a hitch designed for towing. Do not attach towed equipment except at the hitch point.
- Follow the manufacturer's recommendation for weight limits for towed equipment and towing on slopes.
- Never allow children or others in or on towed equipment.
- On slopes, the weight of the towed equipment may cause loss of traction and loss of control.
- Travel slowly and allow extra distance to stop.

V. SERVICE

SAFE HANDLING OF GASOLINE

To avoid personal injury or property damage, use extreme care in handling gasoline. Gasoline is extremely flammable and the vapors are explosive.

- Extinguish all cigarettes, cigars, pipes, and other sources of ignition.
- Use only approved gasoline container.
- Never remove gas cap or add fuel with the engine running. Allow engine to cool before refueling.
- Never fuel the machine indoors.
- Never store the machine or fuel container where there is an open flame, spark, or pilot light such as on a water heater or other appliances.
- Never fill containers inside a vehicle or on a truck or trailer bed with plastic liner. Always place containers on the ground away from your vehicle when filling.
- Remove gas-powered equipment from the truck or trailer and refuel it on the ground. If this is not possible, then refuel such equipment with a portable container, rather than from a gasoline dispenser nozzle.
- Keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete. Do not use a nozzle lock-open device.
- If fuel is spilled on clothing, change clothing immediately.
- Never overflow fuel tank. Replace gas cap and tighten securely.

GENERAL SERVICE

- Never operate machine in a closed are.
- Keep all nuts and bolts tight to be sure the equipment is in safe working condition.
- Never tamper with safety devices. Check their proper operation regularly.
- Keep machine free of grass, leaves, or other debris build-up. Clean oil or fuel spillage and remove any fuel-soaked debris. Allow machine to cool before storing.

- If you strike a foreign object, stop and inspect the machine. Repair, if necessary, before restarting.
- Never make any adjustments or repairs with the engine running.
- Check grass catcher components and the discharge guard frequently and replace with manufacturer's recommended parts, when necessary.
- Mower blades are sharp. Wrap the blade or wear gloves, and use extra caution when servicing them.
- Check brake operation frequently. Adjust and service as required.
- Maintain or replace safety and instruction labels, as necessary.



- Be sure the area is clear of bystanders before operating. Stop machine if anyone enters the area.
- Never carry passengers.
- Do not mow in reverse unless absolutely necessary. Always look down and behind before and while backing.
- Never carry children, even with the blades shut off. They may fall off and be seriously injured or interfere with safe machine operation. Children who have been given rides in the past may suddenly appear in the mowing area for another ride and be run over or backed over by the machine.
- Keep children out of the mowing area and in the watchful care of a responsible adult other than the operator.
- Be alert and turn machine off if a child enters the area.
- Before and while backing, look behind and down for small children.
- Mow up and down slopes (15° Max), not across.
- Be alert and turn machine off if a child enters the area.
- Choose a low ground speed so that you will not have to stop or shift while on the slope.
- Avoid starting, stopping, or turning on a slope. If the tires lose traction, disengage the blades and proceed slowly straight down the slope.
- If machine stops while going uphill, disengage blades, shift into reverse and back down slowly.
- Do not turn on slopes unless necessary, and then, turn slowly and gradually downhill, if possible.

CONGRATULATIONS on your purchase of a new Grass Catcher. It has been designed, engineered and manufactured to give you the best possible dependability and performance.

Should you experience any problems you cannot easily remedy, please contact your nearest authorized service center/department. They have competent, well trained technicians and the proper tools to service or repair this unit.

Please read and retain this manual. The instructions will enable you to assemble and maintain your Grass Catcher properly. Always observe the "SAFETY RULES".

TABLE OF CONTENTS

SAFETY RULES	2-3
ASSEMBLY	5-9
OPERATION	10

CUSTOMER RESPONSIBILITIES.....	11
STORAGE.....	11
REPAIR PARTS	Center of Manual

KNOW YOUR GRASS CATCHER

READ THIS OWNER'S MANUAL AND SAFETY RULES BEFORE ASSEMBLING OR OPERATING YOUR GRASS CATCHER. Compare the illustrations with the carton contents to familiarize yourself with the parts before starting the assembly. Study the operating instructions and safety precautions thoroughly to insure proper functioning of your Grass Catcher and to prevent injury to yourself and others. Save this manual for future reference.




The operation of any tractor can result in foreign objects thrown into the eyes, which can result in severe eye damage. Always wear safety glasses or eye shields before starting your tractor and while mowing. We recommend a wide vision safety mask for over the spectacles or standard safety glasses.

UNPACKING INSTRUCTIONS

- Remove all parts and packing materials from carton.
- Check carton contents against list. Be sure all parts are there.


CARTON CONTENTS:

(2) Container Tops	(1) Support Assembly
(2) Container Bottoms	(1) Cover Assembly
(1) Upper Chute	
(1) Lower Chute	

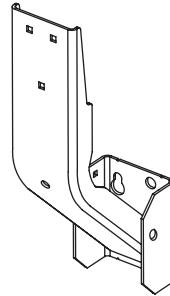

SUPPORT ASSEMBLY

PARTS IDENTIFICATION

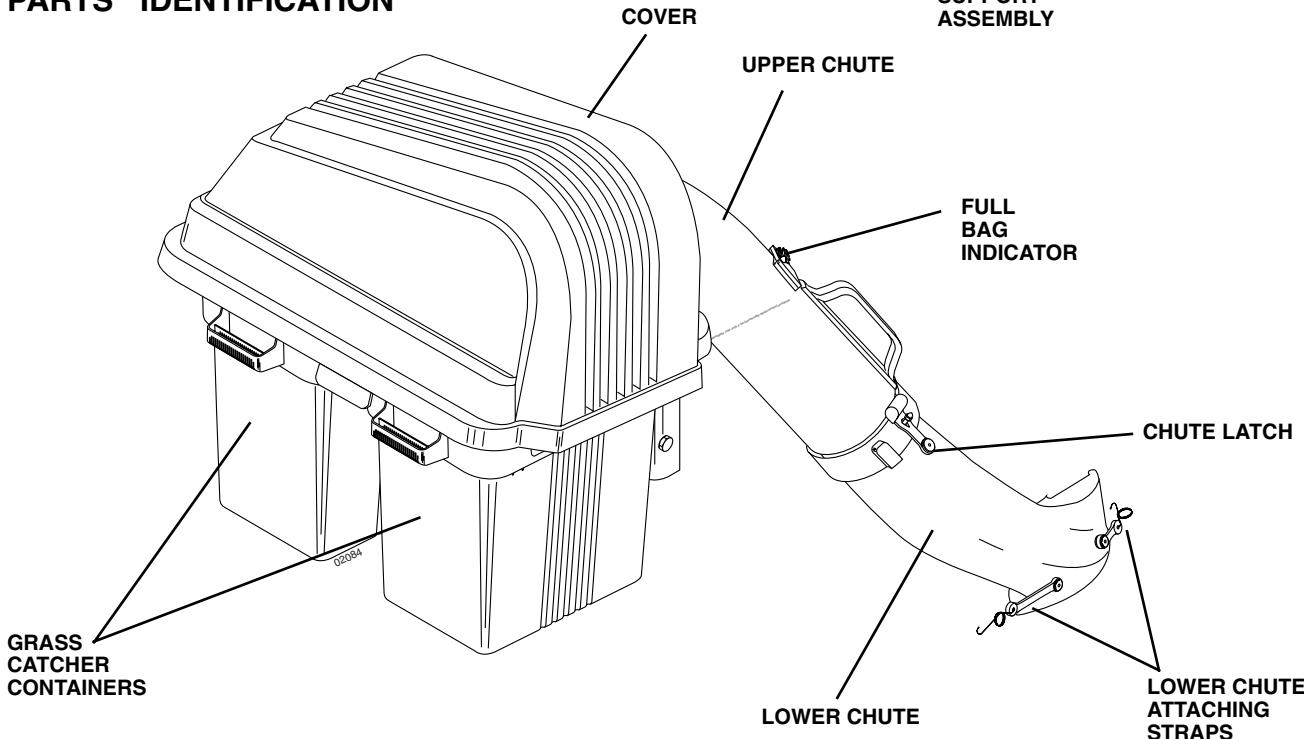

NOTE: When right hand (R.H.) and left hand (L.H.) are mentioned in this manual, it means when you are seated on the tractor, in the operator's position.

CAUTION: BEFORE ASSEMBLING GRASS CATCHER TO TRACTOR:

- Depress clutch/brake pedal fully and set parking brake.
- Place gearshift/motion control lever in "NEUTRAL" position.
- Place attachment clutch in "DISENGAGED" position.
- Turn ignition key "OFF" and remove key.
- Make sure the blade and all moving parts have completely stopped.
- Disconnect spark plug wire from spark plug and place wire where it cannot come in contact with plug.



ASSEMBLY

1 BAGGER SUPPORT ASSEMBLY (See Fig. 1A)

Simply hang the support assembly on the bolts.

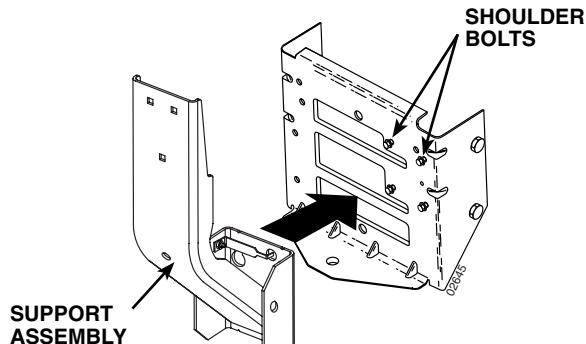


FIG. 1A

TO REMOVE THE SUPPORT ASSEMBLY (See Fig. 1B)

1. Pull outward on the stop bracket enough to allow support assembly to be lifted up and away from drawbar.

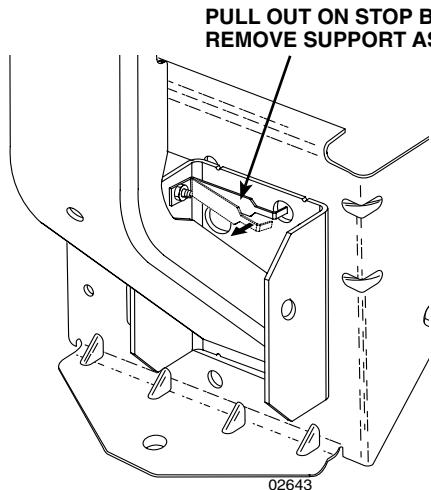


FIG. 1B

2 MOUNTING COVER ASSEMBLY TO SUPPORT ASSEMBLY (See Fig. 2)

NOTE: For ease of assembly, you may wish to obtain the assistance of another person for mounting cover assembly to tractor.

1. Lift cover and align cover bracket with support assembly.
2. Slide cover assembly down onto the support assembly.

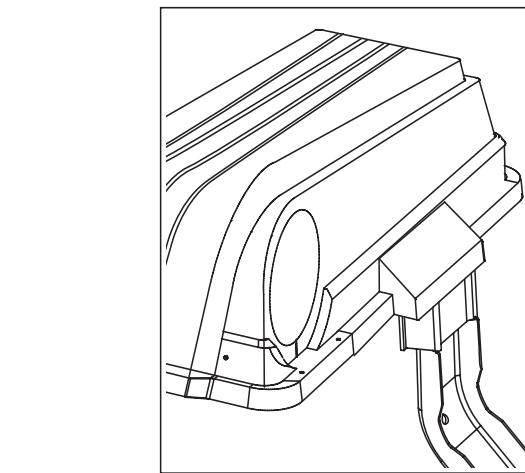
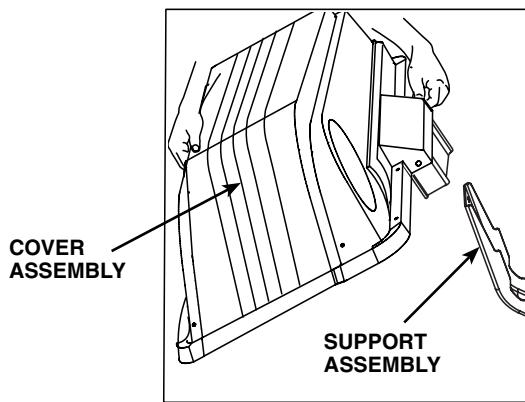


FIG. 2

3 CONTAINER ASSEMBLY (See Fig. 3)

1. Place bottom half inside of top half, as shown.
2. Place one foot inside bottom half and lift top half to meet bottom half.
3. Press halves tightly together while lifting top to lock into place as shown.
4. Repeat for other containers.

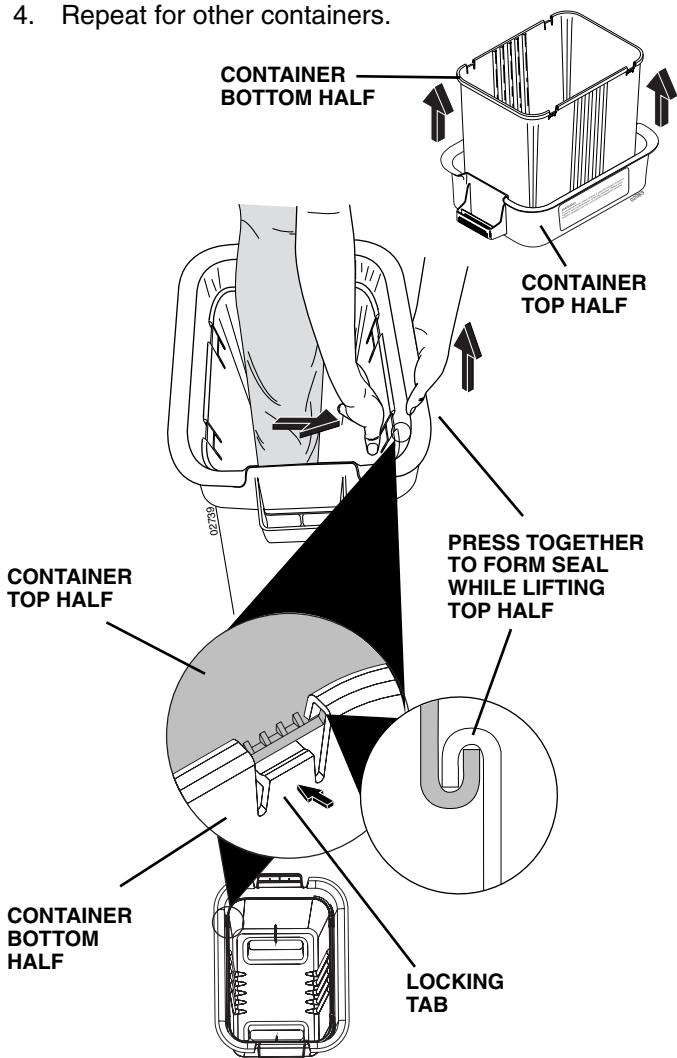


FIG. 3

4 CONTAINER MOUNTING (See Fig. 4)

1. Install one container to left side first with warning to outside of unit. Install other container to right side.

NOTE: Right container should always overlap left container at center support.

2. Close cover and lock latch handle over center support tube.


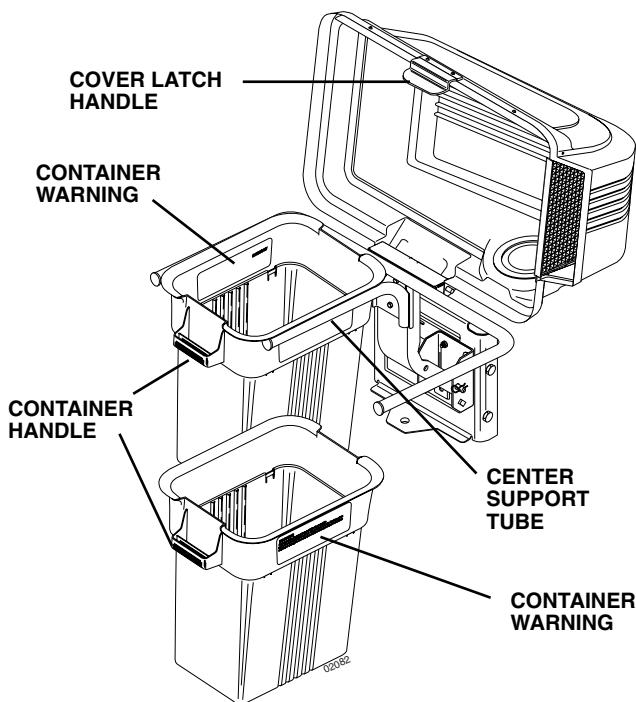


FIG. 4

ASSEMBLY CHECK: Squeeze sides of lower half of container and check that there is no gap between upper and lower halves. If a gap appears, unlock tabs to separate container halves and repeat instructions above.

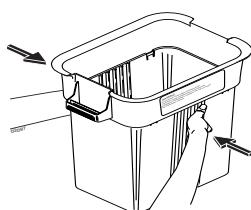

5 LOWER CHUTE - MOWER WITH MOUNTING TAB (See Fig. 5A)

1. Raise and hold deflector shield in upright position.
2. Place slot in lower chute over tab on mower and position lower chute over mower opening as shown.
3. Hook rear latch into flange hole on back of mower.
4. Hook front latch into tab hole on front of mower.

- If your tractor is equipped with gauge wheels on the deck, then it will be necessary to hook the rear latch into the hole in the R.H. gauge wheel bracket.



CAUTION: Do not remove deflector shield from mower. Raise and hold shield when attaching lower chute and allow it to rest on chute while in operation.

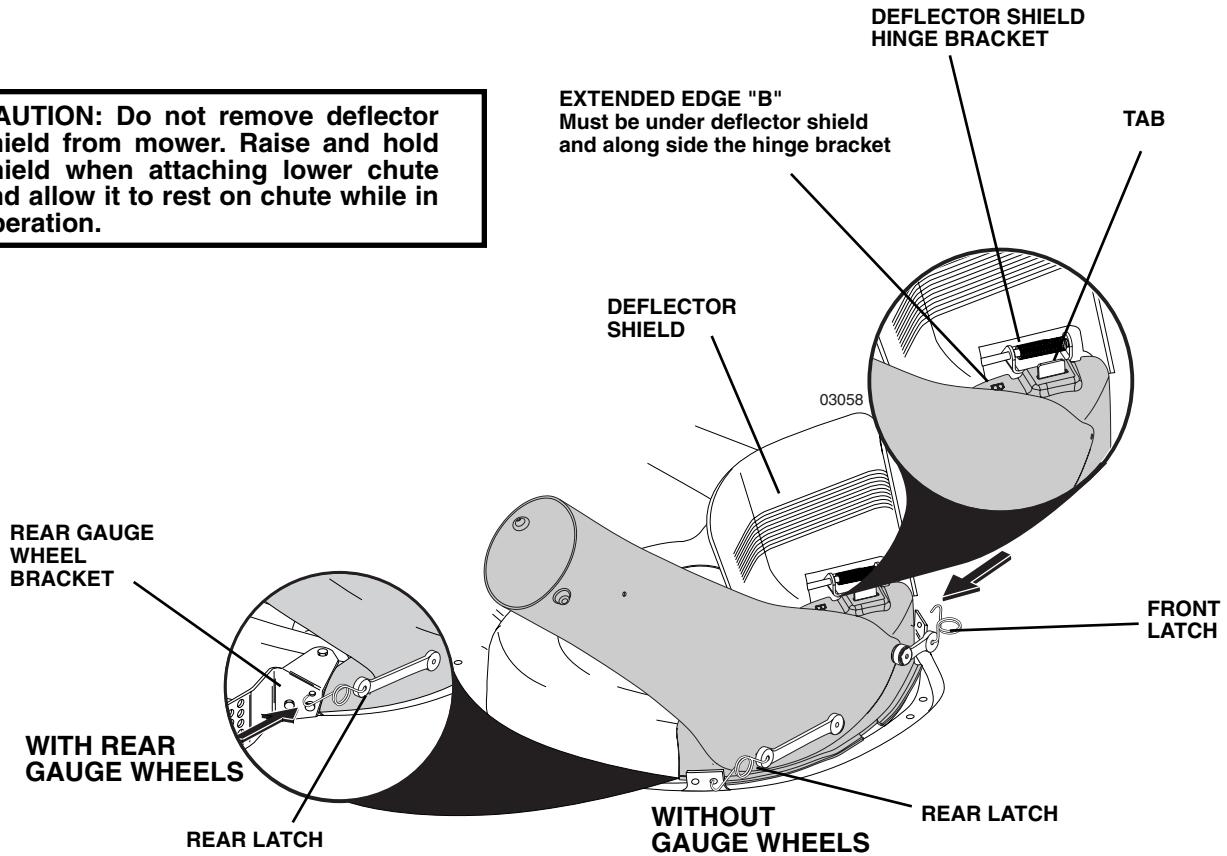



FIG. 5A

5 LOWER CHUTE - MOWER WITHOUT MOUNTING TAB (See Fig. 5B)

1. Lower mower deck to its lowest cutting position.
2. With your right hand, raise and hold deflector shield in upright position.
3. With your left hand, hold lower chute as shown and position lower rear edge of chute between gauge wheel bracket tab and mower housing, then carefully release deflector shield and hook rear latch to mower deck.
4. Raise deflector shield and align "B" on lower chute extended edge with "B" on mower housing.
5. With your right hand, push firmly on the lower chute until the extended edge slides under the deflector shield and along side the hinge bracket as shown.
6. With chute in proper position, hold the chute securely, so it does not move, while hooking the front latch to the mower deck.


NOTE: While hooking the latches, the deflector shield may try to push the chute away from the mower deck opening. It is important to hold the chute in position while hooking the latches to the mower deck.

- If your tractor is equipped with gauge wheels on the deck, then it will be necessary to hook the rear latch into the hole in the R.H. gauge wheel bracket.

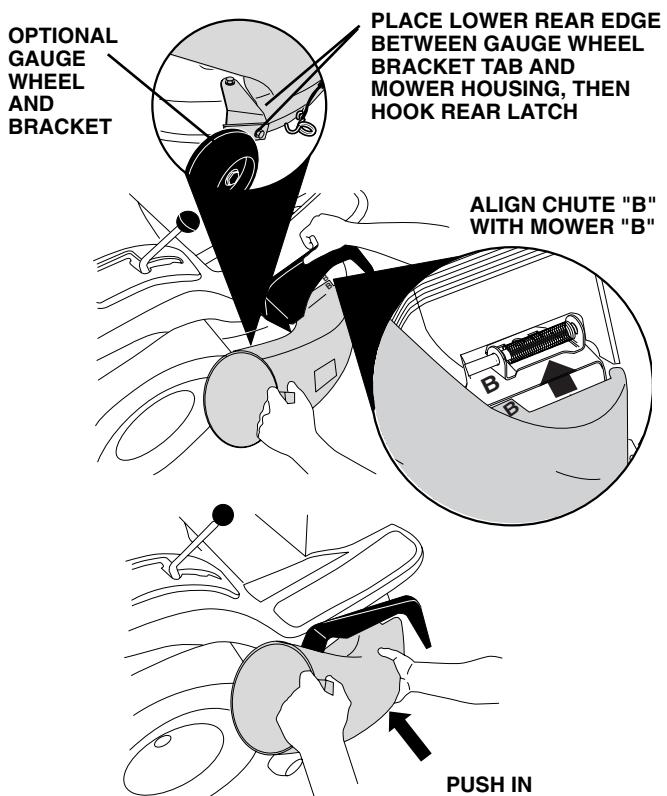

CAUTION: Do not remove discharge guard from mower. Raise and hold guard when attaching lower chute and allow it to rest on chute while in operation.

FIG. 5B

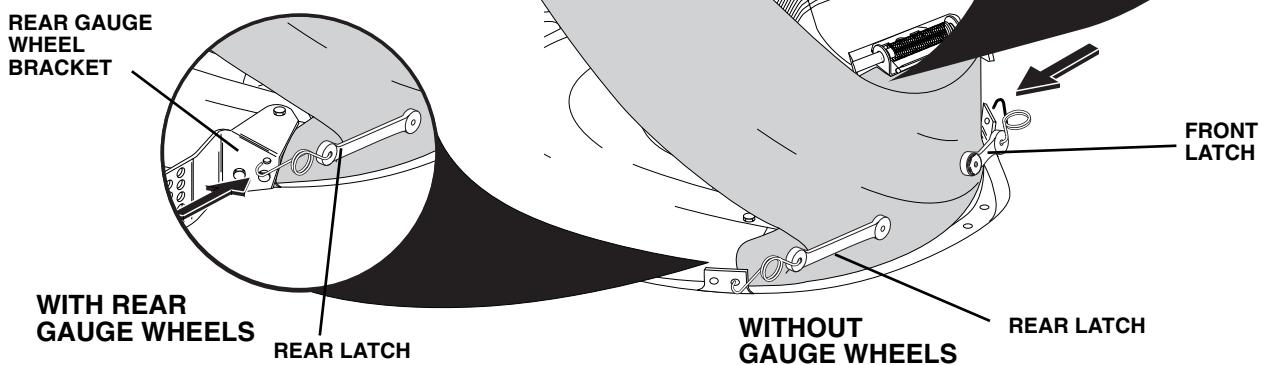

6 UPPER CHUTE (See Figs. 6A & 6B)

1. Lower mower deck to its lowest cutting position.
2. Assemble upper chute by inserting curved end into hole in back of cover.

NOTE: Handle carefully so as not to damage full bag indicator.

3. Push in and turn upper chute until it is in line with lower chute.
4. Align the bosses on lower chute with alignment slots on upper chute and slide together.
5. Secure with rubber latch by hooking hole in latch over latch pin.

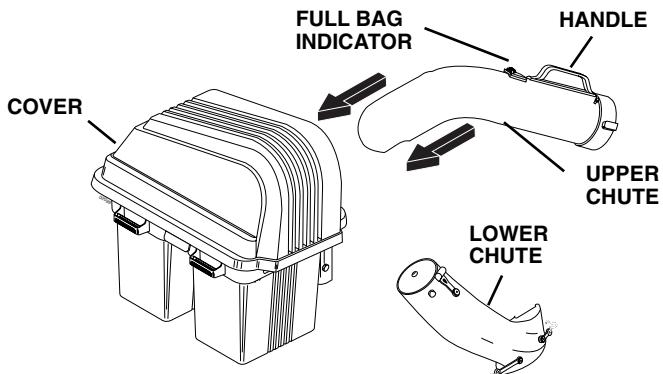


FIG. 6A

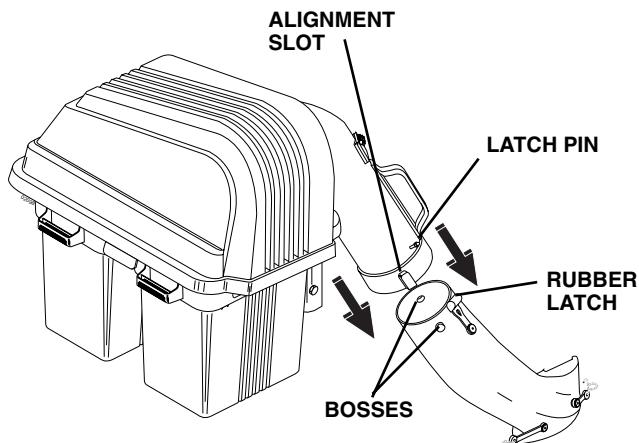


FIG. 6B

7 LEVEL MOWER DECK

Be sure deck is properly leveled for best mower performance. See your tractors owner's manual for instructions.

OPERATION

TIPS FOR IMPROVED BAGGING

OPERATION:

Follow the mower operation instructions in your tractor owner's manual.

When operating your grass catcher on a lawn where grass and leaf bagging equipment has not been used, you are picking up thatch and debris that has accumulated for long periods of time. The amount collected and the total time of operation may be greater than you will experience with regular use of your grass catcher.

- Always run throttle at full speed when bagging.
- Select a gear low enough to give good mower cutting performance, good quality cut and good bagging performance.

NOTE: It may be necessary to overlap width of cut to suit your conditions.

- If grass is extremely tall, it should be mowed twice. The first time relatively high, the second time to desired height.
- Use left hand side of mower for trimming.
- Plastic trash bags can be inserted inside grass catcher containers for ease of debris disposal. To remove the plastic trash bags when full:
 - a. Disengage blades, shift into neutral, engage the parking brake and stop the engine.
 - b. Raise seat. Unlatch and raise cover.
 - c. Remove one container at a time by grasping container handles and pulling toward the rear, off of the tube rails.
 - d. With the container resting on the ground, close and secure the top of the plastic lawn bag.
 - e. Tip the container on its side and slide the filled bag from the container.
 - f. Install a new plastic lawn bag with the edges of the bag draped over upper lip of the container.
 - g. Repeat for other containers.
 - h. Reinstall containers making sure right container overlaps left container at center supports.
 - j. Close cover and secure latches over center support tubes.

- Avoid cutting wet grass or in the morning while the dew is still heavy. Grass clippings collected under these conditions tend to be sticky and adhere to the walls of the flow path causing clogging.
- Your bagger is equipped with a full bagger indicator. Movement of the wheel increases as the bags fill. The wheel will be spinning fastest just before the bags fill completely. When the wheel stops, it indicates that the bags are full and the chutes have become clogged.

NOTE: To help prevent clogging of chutes, check/empty bags when the wheel is spinning fast. Experience will teach you the best time to empty the bags.

Care should be taken not to damage the parts and that the wheel spins freely at the beginning of each use.

- If the grass catcher fails to pick up cut grass or leaves, it is an indication that clogging has occurred in the system or that the grass catcher containers are full. Usually this is indicated by the stopped movement of the full bagger indicator.
 - a. Disengage blades, shift into neutral, engage the parking brake and stop the engine.
 - Raise seat. Unlatch and raise cover.
 - Slide out containers and dispose of clippings .
 - Replace containers, close cover, and latch.
 - b. Unlatch chutes and check for clogging.
 - Remove all debris in chutes.
 - Reassemble and latch chutes
 - c. Check to insure full bagger indicator has not become clogged.
 - The air passage hole must be clear of debris. Gently insert a small twig or wire into passageway to clear.



CAUTION

- **Do not operate mower with grass catcher partially installed.**
- **Disengage blades and stop engine before leaving tractor seat to empty containers, unclogging chutes, etc.**
- **Close cover before starting.**
- **Disengage mower when crossing driveways or gravel surfaces and other areas where thrown objects could be a hazard.**
- **Do not attempt to vacuum up cans or other potentially hazardous projectiles.**

CUSTOMER RESPONSIBILITIES

GENERAL RECOMMENDATIONS

Always observe safety rules when performing any maintenance.

- Before each use check for loose fasteners.
- Clean unit thoroughly after each use.

BLADE CARE

For best results mower blades must be kept sharp. Replace bent or damaged blades.

- See BLADE CARE instructions in your tractor owner's manual.

STORAGE

When grass catcher is to be stored for a period of time, clean it thoroughly, remove all dirt, grass, leaves, etc. Store in a clean, dry place.



CAUTION: Do not leave grass in bagger containers. Empty containers after each use and before storing. Failure to do so may result in spontaneous combustion which could develop into a fire.



CAUTION: BEFORE PERFORMING ANY MAINTENANCE, SERVICE OR ADJUSTMENTS:


- Depress clutch brake pedal fully and set parking brake.
- Place gearshift/motion control lever in "NEUTRAL" position.
- Place clutch control in "DISENGAGED" position.
- Turn ignition key to "OFF" position.
- Make sure blades and all moving parts have completely stopped.
- Disconnect spark plug wire(s) from spark plug(s) and place wire where it cannot come in contact with plug.



CAUTION: Grass catcher components are subject to wear, damage and deterioration, which could expose moving parts or allow objects to be thrown. Frequently check components and replace with manufacturer's recommended parts, when necessary.

REPAIR PARTS / PIÈCES DE RECHANGE

GRASS CATCHER - - MODEL NUMBER QCT46 / RAMASSE-HERBE - - NUMÉRO DE MODÈLE QCT46
PRODUCT NUMBER 960 72 00-13 / NUMÉRO DE PRODUIT 960 72 00-13

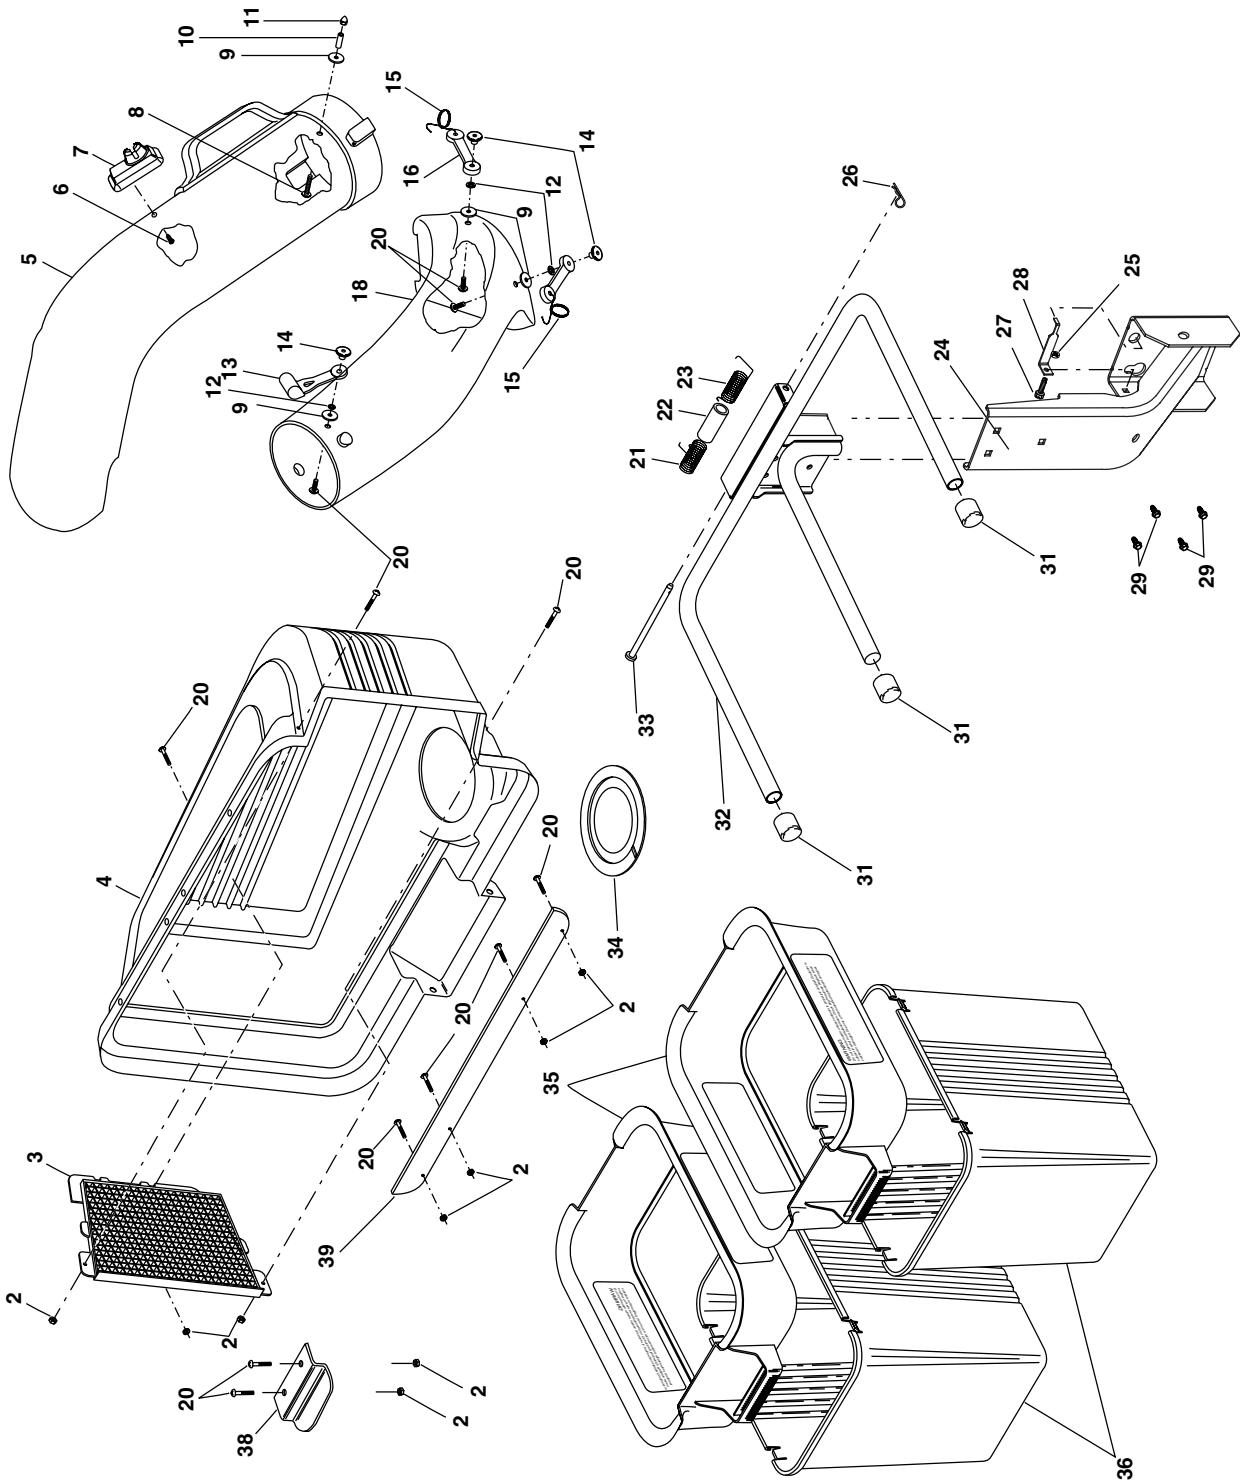

REPAIR PARTS / PIÈCES DE RECHANGE
GRASS CATCHER - - MODEL NUMBER QCT46 / RAMASSE-HERBE -- NUMÉRO DE MODÈLE QCT46
PRODUCT NUMBER 960 72 00-13 / NUMÉRO DE PRODUIT 960 72 00-13

13

KEY NO.	PART NO.	DESCRIPTION	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION	DESCRIPTION
2	532069180	Nut, Crownlock #10-24	Écrou auto-serrant #10-24	23	532132983	Spring, Cover R.H. (gray)	Ressort de couvercle C.D.
3	532127533	Screen, Cover	Grillage de couvercle	24	532180923	Support Assemble	Ensemble du support
4	532171061	Cover Assembly (Includes 3, 38, 39)	Couvercle (Y compris 3, 38, 39)	25	873800400	Locknut	Ecrou frein
5	532411397	Chute, Upper	Glissière supérieure	26	532124670	Spring, Retainer	Ressort de retenue
6	818021008	Screw, Special #10-14x1/2	Vis spéciale #10-14x1/2	27	872140405	Bolt	Boulon
7	532130933	Full Bag Indicator	Indicateur de sac de déchargement	28	532179745	Bracket, Lock	Support frien
8	532087175	Screw, #10-24 x 1-1/8	Vis #10-24 x 1-1/8	29	532170165	Shoulder Bolt (Not included with Grass Catcher)	Boulon (Non Inclus avec votre ramasse-herbe)
9	819061216	Washer 3/16x3/4x16 Ga.	Rondelle 3/16x3/4x16 Ja.	31	532174083	Plug, Tubing End	Chapeau de l'extrémité de tuyau
10	532007206	Spacer, Split	Entretroise fendue	32	532179746	Bagger, Frame	Cadre de ramasse-herbe
11	532060867	Nut, Acorn #10-24	Écrou borgne #10-24	33	532192786	Pin, Hinge	Goupille de charnière
12	810071000	Washer, lock	Rondelle frein	34	532127534	Gasket, Cover	Garniture de couvercle
13	532109808	Latch, Chute	Loquet de glissière	35	532183286	Container, Top	Conteneur supérieur
14	532125004	Nut, Weld	Axe du loquet	36	532129586	Container, Bottom	Conteneur inférieur
15	532160793	Latch, Hook	Crochet de loquet	38	532130895	Latch Handle, Cover	Poignée de loquet de couvercle
18	532405455	Chute, Lower	Glissière inférieure	39	532155042	Strip, Reinforcement	Bandé
20	871081010	Screw #10-24 x 5/8	Vis #10-24 x 5/8	--	532411426	Owner's Manual, E/F	Manuel du propriétaire, F/A
21	532132796	Spring, Cover L.H. (black)	Ressort de couvercle C.G.	--	532411427	Owner's Manual, S	Manuel du propriétaire, E
22	532133235	Spacer, Cover	Entretroise de couvercle	--	--	--	--

RESPONSABILITÉS DU CLIENT

RECOMMANDATIONS GÉNÉRALES

ATTENTION: Les compositions du ramasse-herbe sont fabriquées du matériau très résistant. Cependant, en cas d'usure excessive ou endommagement, remplacez-les immédiatement. Les compositions aux doigts sont fabriquées afin d'assurer un bon fonctionnement et la sécurité du produit.



- Avant chaque utilisation, vérifiez pour les attaches lâches. Nettoyez complètement le produit après chaque utilisation.
- Pour obtenir les meilleurs résultats, les lames doivent être conservées propres. Utilisez toujours les règles de sécurité quand vous faites l'entretien.

SOIN DES LAMES

Observez toujours les règles de sécurité quand vous faites l'entretien. Pour obtenir les meilleurs résultats, les lames doivent être conservées propres. Utilisez toujours les règles de sécurité quand vous faites l'entretien.

ATTENTION: Ne permettez pas de rester de l'herbe coupée dans le ramasse-herbe! Ceci peut causer un danger chaque usage et avant d'entreposer.



Quand le ramasse-herbe doit être entreposé pour une certaine période, nettoyez-le soigneusement. Enlevez toutes les saletés, la grasse, les débris de feuille. Entreposez dans un espace propre et sec.

ENTREPOSAGE

ATTENTION: AVANT D'EFFECTION, TOUS L'ENTRETIEN, LINS PECITION,



- Appuyez complètement sur la pédale de frein/embrayage et fixez le frein de stationnement.
- Mettez le levier de commande de changement de vitesse/mouvement en position à point mort (N).
- Tournez l'acide de contact en position d'arrêt (OFF).
- Assurez-vous que les lames et toutes les pièces mobiles soient complètement arrêtées.
- Débranchez les fils de bougie d'allumage et posez-les de telle façon avec la (les) bougie(s).

OU REGLAGÉ:

TOUS L'ENTRETIEN, LINS PECITION,



ATTENTION: AVANT D'EFFECTION, TOUS L'ENTRETIEN, LINS PECITION,

ATTENTION: AVANT D'EFFECTION, TOUS L'ENTRETIEN, LINS PECITION,

UTILISATION

CONSEILS POUR AMELIORER LE RAMASSEAGE:

CONSEILS POUR AMÉLIORER LE RAMASSAGE:	
• Evitez de tondre le gazon mouillé ou penaudant le matin lorsque la rosée est très lourde. L'herbe coupée qui a amassé sous ces conditions a une tendance à coller aux parois et à bloquer le ramasse-herbe.	Quand vous utilisez votre ramasse-herbe sur une pelouse où l'équipement du ramasse-herbe est détrempé, la charme et les débris qui sont dans la pelouse peuvent être éjectés lorsque vous utilisez votre ramasse-herbe. La quantité rassemblée et le temps demandant les débris qui sont dans la pelouse peuvent être éjectés lorsque vous utilisez votre ramasse-herbe.
• Votre ensacheur est équipé d'un indicateur pour vous informer que l'ensacheur est plein. Le mouvement de la roue augmente au fur et à mesure que les sacs se remplissent. La roue s'arrête lorsque les sacs sont pleins et que les gouttes sont bloquées.	Quand l'herbe est extrêmement longue, elle doit être coupée deux fois; la première fois relativement haute, la deuxième fois à la hauteur désirée.
• Faites attention pour que les sacs n'explosent lorsque vous montez le temps idéal pour vidrer les sacs.	Utilisez le côté à gauche de la tondue pour rogner.
• REMARQUE: Afin d'éviter le blocage des chutes, vérifiez/videz régulièrement la roue tondue rapidement au commencement de chaque utilisation.	Les sacs-poubelles de plastique peuvent être insérés dans les contenues du ramasse-herbe pour faciliter la disposition des débris. Pour enlever les sacs-poubelles dans les contenues du ramasse-herbe, mettez le levier de changement de sacs-poubelles de plastique à la tondue pour rogner.
• Si l'herbe coupe dessus, mettez le levier de changement de sacs-poubelles de plastique à la tondue pour rogner.	Utilisez le côté à gauche de la tondue pour rogner.
• a. Dégagéz les lames, mettez le levier de changement de sacs-poubelles de plastique à la tondue pour rogner.	a. Dégagéz les lames, mettez le levier de changement de sacs-poubelles de plastique à la tondue pour rogner.
• b. Soulvez le siège, décliquez et soulvez la couverte.	b. Soulvez le siège. Levrez le loquet et soulvez la couverte.
• c. Vérifiez que l'indicateur de sac plein n'a pas été déclenché.	c. Soulvez le (1) contenuer à une fois en empilant les poignées de contenuer. Vous le tirer vers l'arrière et glissez-les des tubes.
• d. Posez le contenuer sur la terre puis fermez et fixez le sommet du sac-poubelle.	d. Posez le contenuer sur la terre puis fermez et fixez le sommet du sac-poubelle.
• e. Basculez le contenuer sur son côté et glissez le sac-poubelle plein hors du contenuer.	e. Basculez le contenuer sur son côté et glissez le sac-poubelle plein hors du contenuer.
• f. Mettez en place un nouveau sac-poubelle avec les bordes du sac drapés sur le bord supérieur du contenuer.	f. Mettez en place un nouveau sac-poubelle avec les bordes du sac drapés sur le bord supérieur du contenuer.
• g. Remettez en place les instructions ci-dessus pour l'autre contenuer.	g. Remettez en place les instructions ci-dessus pour l'autre contenuer à droite chevauché le contenuer à gauche sur le contenuer central.
• h. Fermez le couvercle et fixez le loquet sur le tuyau du soutien central.	h. Fermez le couvercle et fixez le loquet sur le tuyau du soutien central.
• i. J.	i. J.

ATTENTION

- Utilisez pas la tonduse avec masse-hebre installe partielement.
- Dégagiez les lames et coupez le moteur avant de descendre le siège de tracteur à vider les conteneurs, débrousez les gisseries, etc.
- Fermez le couvercle avant de démarrer le moteur.
- Dégagiez la tonduse lorsdqe vous traversez des surfaces en gravier ou lorsqu'il y a un danger que des objets pourraient étre projetés.
- N'essayez pas de ramasser les bâtons ou les autres objets qui pourraient étre dangereux.

7 NIVELER LE CARTER DE TONDUEUSE

Faites attention que le carter de tondueuse est correctement nivéle pour le meilleur rendement de la tondueuse. Référez-vous au manuel du propriétaire de votre tracteur pour les instructions.


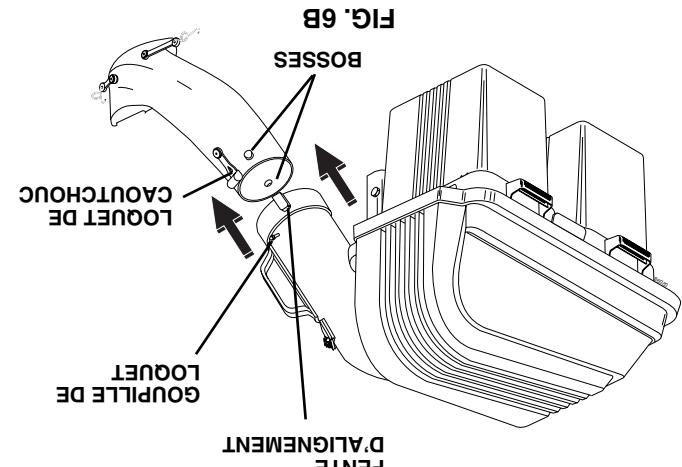


FIG. 6A

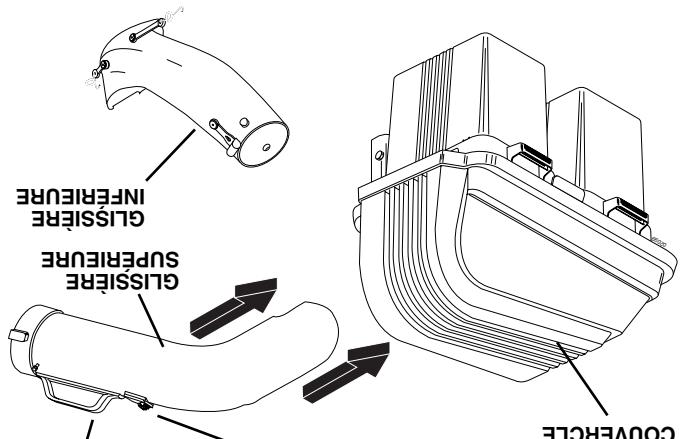


1. Baissez le carter de tondueuse à la position de coupe plus basse. Montez la glissière supérieure en insérant l'extrême de courbée dans le trou en l'arrière du couvercle.
2. Faites attention pour que l'indicateur de sac décharge soit pas serré.
3. Installez et tournez la glissière supérieure jusqu'à ce qu'elle s'aligne avec la glissière inférieure.
4. Alignez les bosses sur la glissière inférieure avec les fentes d'alignement sur la glissière supérieure et glissez-les ensemble.
5. Fixez avec le loquet de caoutchouc en accrochant le loquet par-dessus de la goulotte de loquet.


(Voir les Figs. 6A & 6B)

6

REMARQUE: Faites attention pour que l'indicateur de sac décharge soit pas serré.

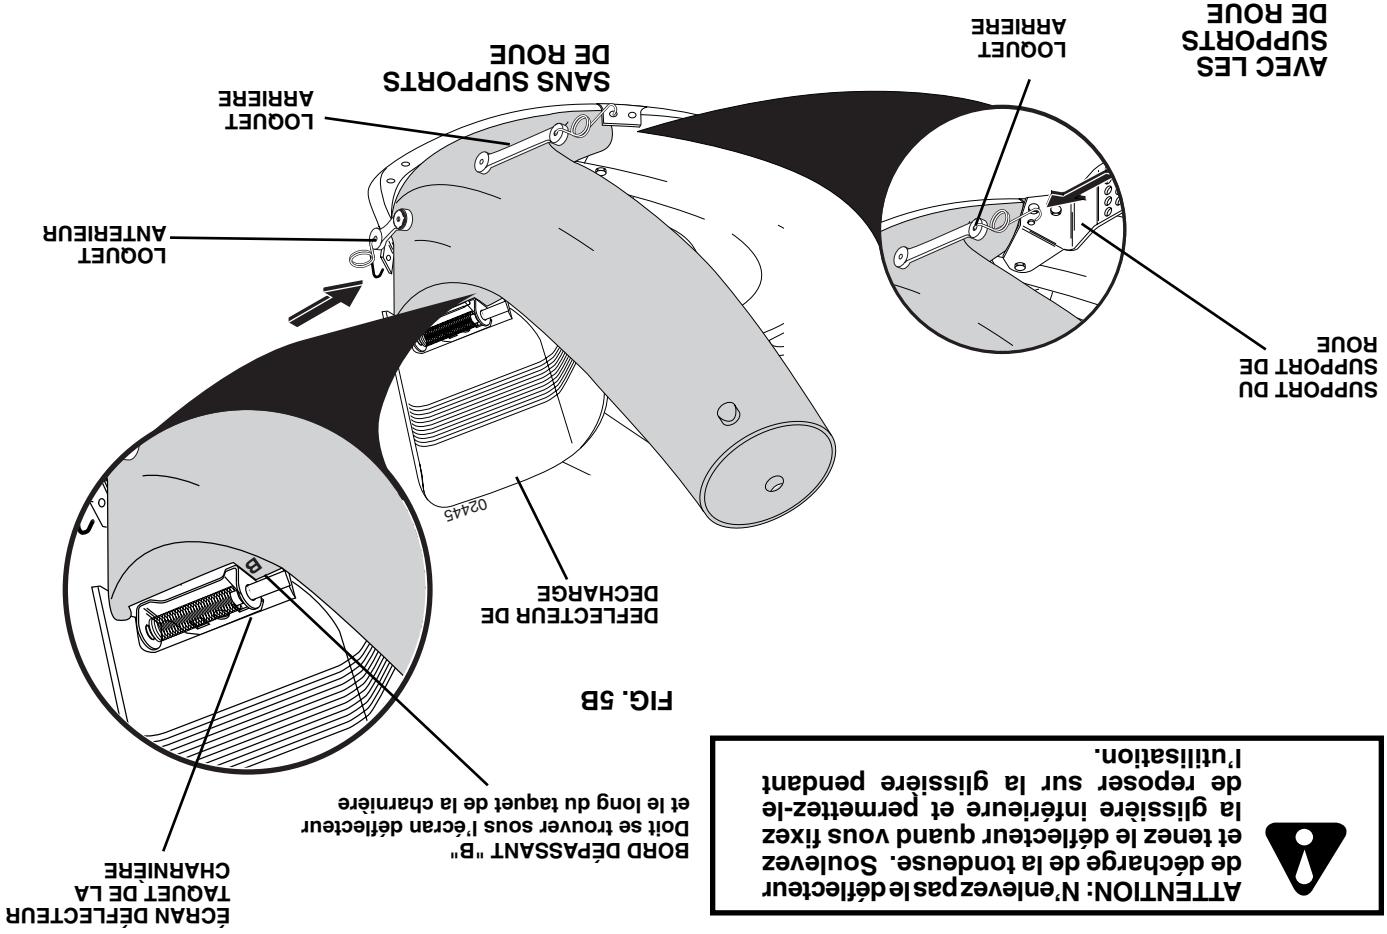

ATTENTION: N'envoyez pas le déflécteur de décharge de la tondeuse. Soulevez le déflécteur de la tondeuse lorsque le déflécteur d'écran est fixé de la glissière inférieure quand vous l'avez déposé sur la glissière inférieure et permettez-le de reposer sur la glissière pendante

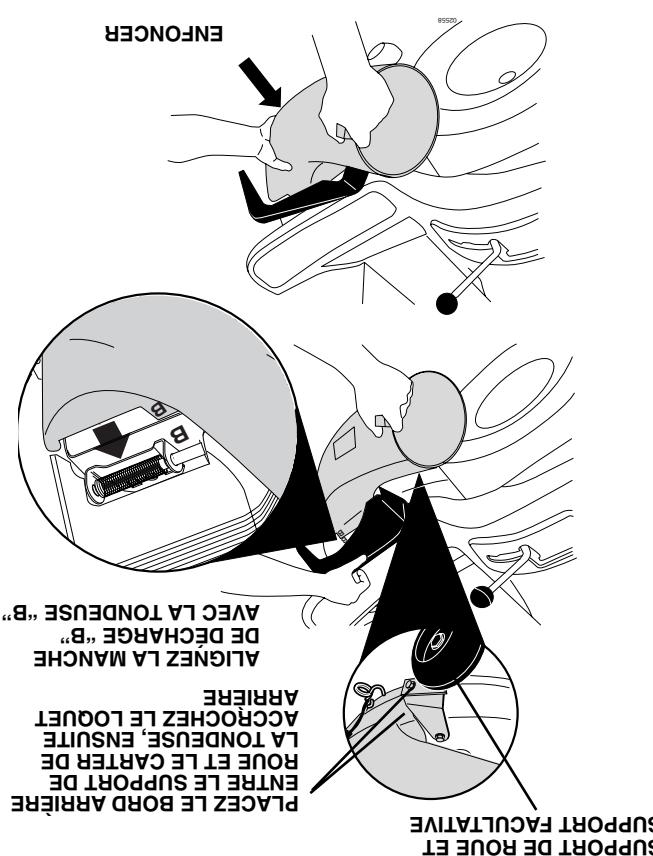


REMARQUE : Si l'appareil est équipé d'un couvercle pour la déchiqueteuse, veuillez l'enlever du châssis de la tondeuse et l'entreposer en lieu sûr.

- Bassez le carter de tondeuse à la position de coupe plus basse.
- With your main right hand, hold the rear wheel assembly in the correct position. Make sure the handlebar is aligned with the handlebar of the "B" model. Make sure the rear wheel assembly is aligned with the rear wheel assembly of the "B" model. Align the rear wheel assembly with the rear wheel assembly of the "B" model.
- With your right hand, hold the rear wheel assembly in the correct position. Make sure the handlebar is aligned with the handlebar of the "B" model. Make sure the rear wheel assembly is aligned with the rear wheel assembly of the "B" model. Align the rear wheel assembly with the rear wheel assembly of the "B" model.
- With your right hand, hold the rear wheel assembly in the correct position. Make sure the handlebar is aligned with the handlebar of the "B" model. Make sure the rear wheel assembly is aligned with the rear wheel assembly of the "B" model. Align the rear wheel assembly with the rear wheel assembly of the "B" model.
- With your right hand, hold the rear wheel assembly in the correct position. Make sure the handlebar is aligned with the handlebar of the "B" model. Make sure the rear wheel assembly is aligned with the rear wheel assembly of the "B" model. Align the rear wheel assembly with the rear wheel assembly of the "B" model.
- With your right hand, hold the rear wheel assembly in the correct position. Make sure the handlebar is aligned with the handlebar of the "B" model. Make sure the rear wheel assembly is aligned with the rear wheel assembly of the "B" model. Align the rear wheel assembly with the rear wheel assembly of the "B" model.
- With your right hand, hold the rear wheel assembly in the correct position. Make sure the handlebar is aligned with the handlebar of the "B" model. Make sure the rear wheel assembly is aligned with the rear wheel assembly of the "B" model. Align the rear wheel assembly with the rear wheel assembly of the "B" model.
- With your right hand, hold the rear wheel assembly in the correct position. Make sure the handlebar is aligned with the handlebar of the "B" model. Make sure the rear wheel assembly is aligned with the rear wheel assembly of the "B" model. Align the rear wheel assembly with the rear wheel assembly of the "B" model.

5 (Voir la Fig. 5B) GLISSEUSE INFÉRIEURE SANS PATTÉ



FIG. 5A

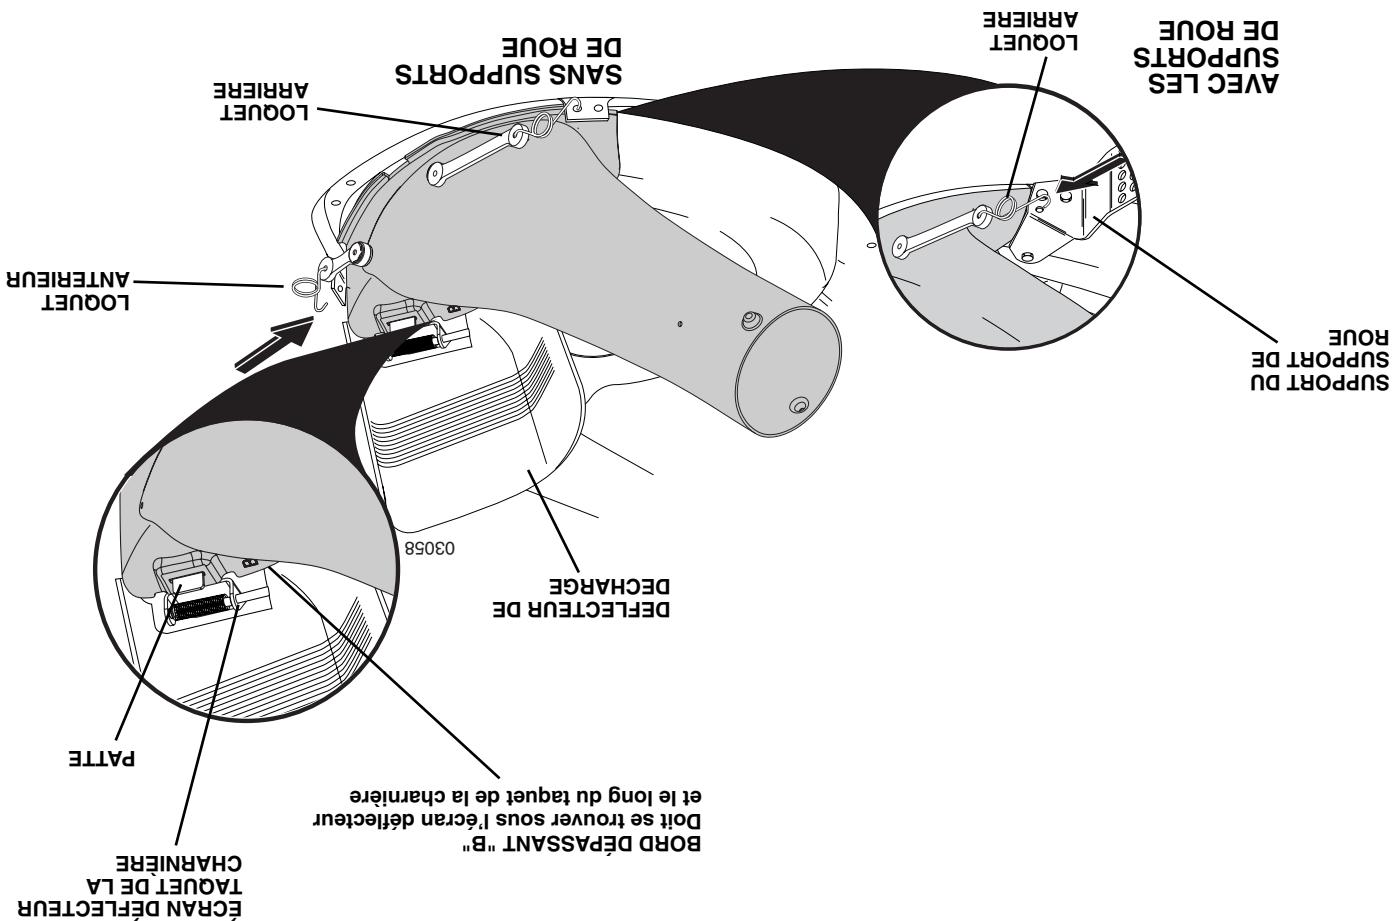

ATTENTION: Nevez pas le délecteur de décharge dans la position droite.

Placez la fenêtre dans la manchette de décharge inférieure au-dessus la patté sur le carter de tonduse.

Accrochez le loguet arrier dans le trou de patté sur l'arrière devant du carter de tonduse.


Accrochez le loguet arrier dans le trou de patté sur l'arrière du carter de tonduse.

Montez la glissière et tenez le délecteur sur la glissière mettez-le de reposer sur la glissière et le long du taguet de la charnière vous fixez la glissière inférieure inférieure quand vous trouvez sous l'écran délecteur.


Doit se trouver sous l'écran délecteur et le long du taguet de la charnière

- Soulevez et tenez le délecteur de décharge dans la position droite.
- Placez la fenêtre dans la manchette de décharge inférieure au-dessus la patté sur le carter de tonduse comme montré.
- Accrochez le loguet arrier dans le trou de patté sur l'arrière du carter de tonduse.
- Accrochez le loguet arrier dans le trou de patté sur l'arrière devant du carter de tonduse.
- Montez la glissière et tenez le délecteur sur la glissière mettez-le de reposer sur la glissière et le long du taguet de la charnière vous fixez la glissière inférieure inférieure quand vous trouvez sous l'écran délecteur.
- Doit se trouver sous l'écran délecteur et le long du taguet de la charnière

5 GLISSIÈRE INFÉRIEURE AVEC PATTÉ (Voir la Fig. 5A)

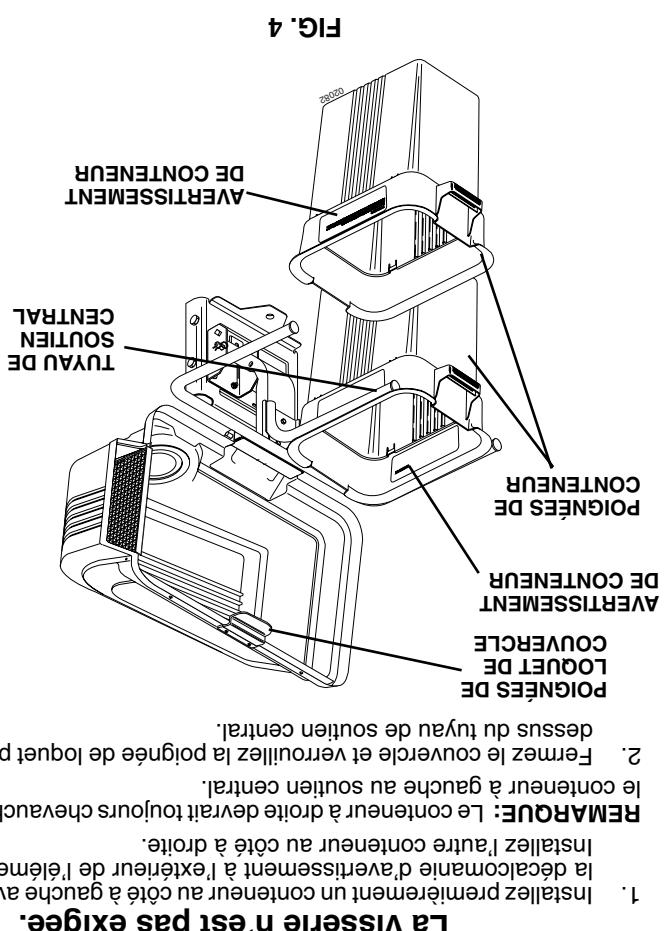

1. Mettez la motte inférieure dans la motte supérieure, comme montré.
2. Mettez un pied dans la motte inférieure et soulevez la motte supérieure à se joindre à la motte inférieure.
3. Pressez fermement les molles au même temps pendant qu'elles sont serrées à encoller comme montré.
- IMPORTANT: AVANT D'ENCLENCHER LES PATTES, LES BORDS A CROCHET SUR LES DEUX COTES DOIVENT CHAVACHER A FAGONNER UN SCÉAU COMME MONTRÉ DANS L'ENCART.

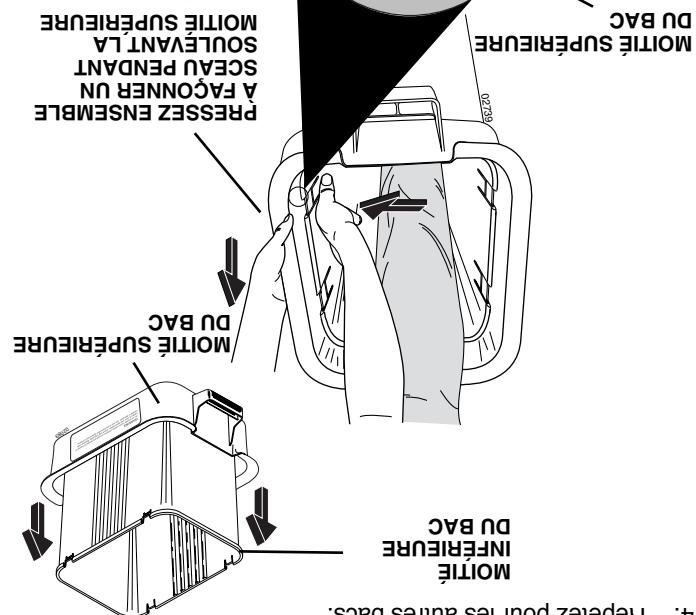

VERIFICATION DE L'ENSEMBLE: Pressez les côtés de la motte inférieure du bac à gazon et vérifiez qu'il n'y a pas un écart appréciable. Si un écart appréciable, déverrouillez les parties supérieure et inférieure. Si un écart appréciable, déverrouillez les parties supérieure et inférieure du bac à gazon et vérifiez les molles de bac et de la motte au-dessus.

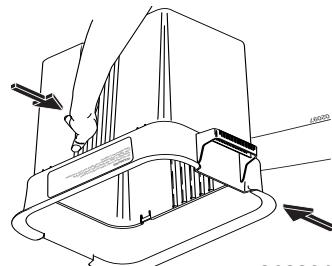


FIG. 3

3 ENSEMBLE DU BAC À GAZON

4 MONTER DU CONTENEUR

(Voir la Fig. 4)

La visserie n'est pas exigée.

2 COMMENT ASSÉMBLER L'ENSEMBLE DE COUVERCLE A. L'ENSEMBLE DU SUPPORT (Voir à Fig. 2)

HEMATOLOGIE: Pour décliner l'assemblage du couvercle au raccord, il est conseillé de demander l'aide d'une autre personne.

1. Soulevez et tournez le couvercle pour aligner le support du couvercle avec le couvercle du support.

2. Glissez l'ensemblé du couvercle vers le bas sur le support.

Accrochez simplement de l'ensemble du support, sur les boulons.

(Voir la Fig. 1A)


ENSEMBLE DU SUPPORTE L'ENSACHEUSE

SUPPORTE (Voir la Fig. 2)

POUR ENLEVER L'ASSEMBLAGE DE SOUTIEN

1. Tirez vers l'extérieur le support d'arrêt pour permettre que l'assemblage de soutien soit solide vers en haut et loin de la barre d'attelage.
2. Tirez le support d'arrêt pour arrêter l'assemblage de soutien.
3. Assurez-vous que l'assemblage de soutien est bien arrêté.

FIG. 2

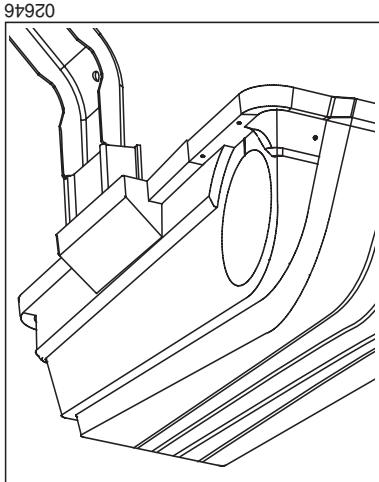

The diagram illustrates the rear fuselage section. A large, hinged cover plate is shown in an open position, revealing the internal structure. The hinge mechanism is labeled 'ENSEMBLE DU COUVERCLE'. A separate assembly, labeled 'ENSEMBLE DU SUPPORT', is shown attached to the fuselage structure. The entire assembly is shown in a perspective view, highlighting the mechanical components and their integration into the aircraft's rear fuselage.




- Mettez l'embrayage d'accessoire dans la position de débrayée "DISENGAGED".
- Tournez la clé de contact dans la position d'arrêt et enlevez la clé.
- Faites attention que la lame et toutes les pièces mobiles ont complètement arrêté.
- Débranchez le fil de bougie d'allumage de la bougie d'allumage et mettez le fil ou il ne peut pas toucher la bougie.


ATTENTION: AVANT DE MONTER LE RAMASSE-HERBE AU TRACTEUR:

REMARQUE: Quand le côté droit (C.D.) et le côté gauche (C.G.) sont mentionnés dans ce manuel, il se réfère à la position de l'opérateur sur le siège du tracteur.

BANDES ATTACHANTES
DE LA GLISSEUSE
INFERIEURE

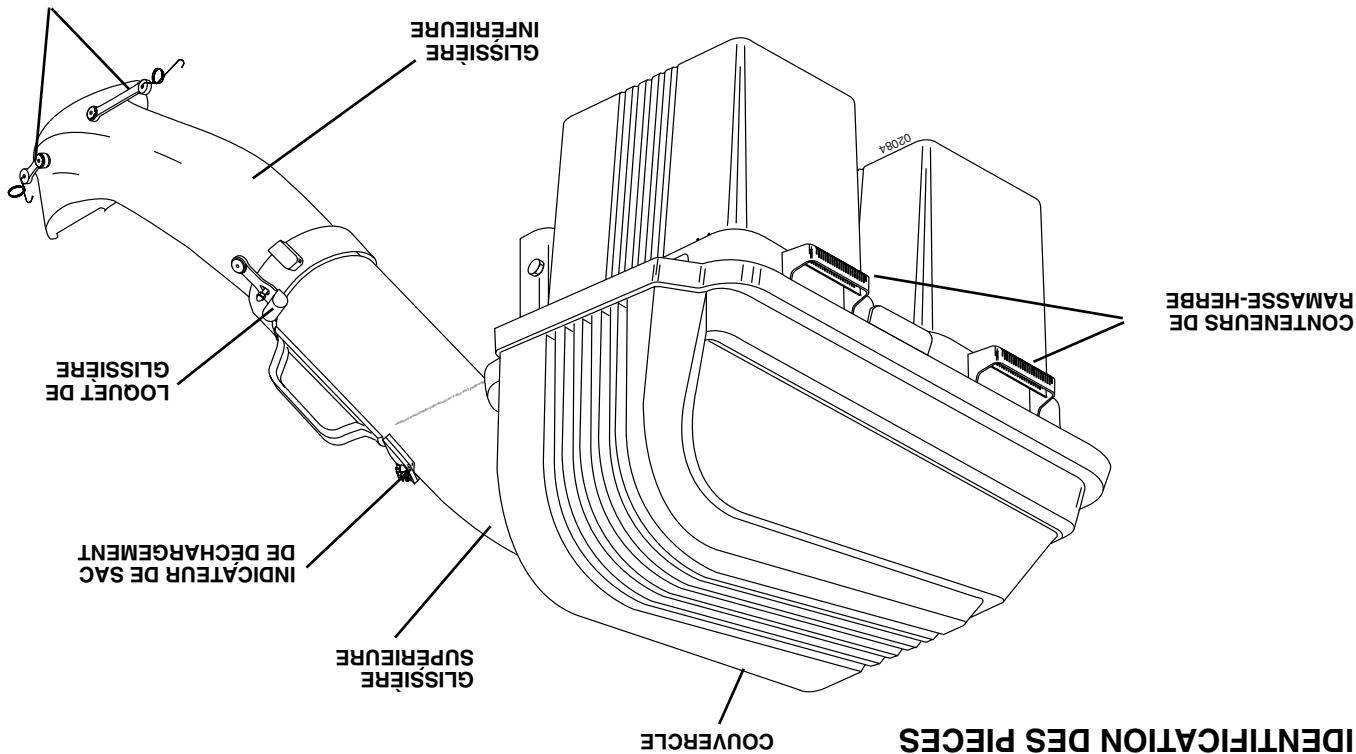

IDENTIFICATION DES PIÈCES

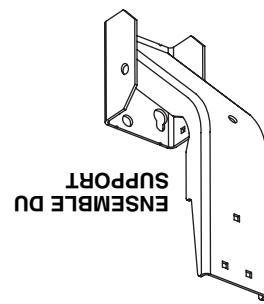

- (1) Ensemble du support
- (2) Sommets de contenuer

que toutes les pièces soient là.

• Vérifiez le contenu du carton contre le tableau. Assurez-vous

• que toutes les pièces sont là.

• Enlevez tous les matériaux d'emballage et les pièces du

carton.

INSTRUCTIONS DE DÉBALLAGE

L'utilisation de tout tracteur peut jeter les objets étrangers dans les yeux qui peuvent aboutir au dommage sévère pour les yeux. Portez toujours les lunettes de sécurité ou les lunettes de sécurité standard panoramique pour ceux qui portent des verres correctives ou des lunettes de sécurité standard. Assurez-vous que toutes les instructions d'utilisation avec le carton pour le bon fonctionnement de votre ramasse-herbe sont comprises dans le contenu du carton pour assurer la sécurité de vos autres. Conservez ce manuel pour la référence d'avvenir.



LESZ CE MANUEL DU PROPRIÉTAIRE ET LES RÈGLES DE SÉCURITÉ AVANT DE MONTER OU UTILISER VOTRE RAMASSE-HERBE. Comparez les illustrations avec le contenu du carton pour se mettre au courant avant de commencer le montage. Étudiez complètement les instructions d'utilisation et les précautions de sécurité d'assurer le bon fonctionnement de votre ramasse-herbe.

CONNASSEZ VOTRE RAMASSE-HERBE

II. Fonctionnement dans les pentes

1. FONCTIONNEMENT GÉNÉRAL

AVERTISSEMENT: Remordue seulement
les accessoires recommandés pour l'élément
tracé. Utilisez votre bon sens pendant
la visiteuse romane. D'après l'ensemble avec
la vitalité de la plus redoutable pendaison que vous
allez sur une pente. Il est dangereux d'avoir
un chargement trop lourd pendu dans un arbre
opérant sur une pente. Les pneus peuvent
détruire la traction avec la terre et vous faire
perdre la commande de votre tracteur.

AVERTISSEMENT: Ne descendez pas les pentes à point mort, vous pourriez perdre la commande du tracteur.

AVERTISSEMENT: Debranchez toujours le fil de bougie et allumez pour prévenir les démarages accidentels, posez-le de telle façon qu'il ne puisse pas entrer en contact avec la bougie d'allumage lors de l'installation, du transport, des ajustements ou des réparations.

Conseils pour l'utilisation en toute sécurité des tracteurs

REGLES DE SECURITE

Conseils pour l'utilisation en toute sécurité des tracteurs



Poulan PRO

- Montage
- Utilisation
- Responsabilités du Client
- Pièces de Rechange

RAMASSE-HERBE
Tondeuse de 17 cm (46 po.)
Numéro de Mfg. ID 96072001300
Numéro de Produit 960 72 00-13
Modèle **GCT46**
MANUEL DU PROPRIÉTAIRE

